

Step 1



- Turn off water

Step 2




- Remove the I-CON TruFire® Solenoid

Step 3 & 4



- Remove Vacuum Breaker top nut
- Loosen angle stop nut

Step 5

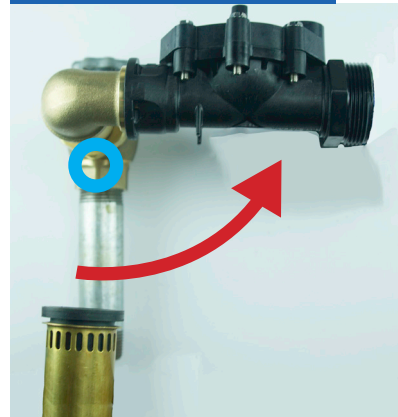


- Move the I-CON MOMENTUM® flush valve to horizontal position and hand tighten the angle stop nut

Step 6



- Remove the C-clip from inlet portion of the I-CON MOMENTUM® flush valve

Step 7

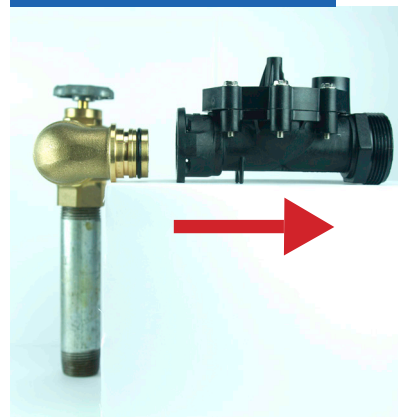

- Pull the I-CON MOMENTUM® flush valve, slightly turning left and right, separating it from the I-CON slip joint brass inlet 90.

Step 8

- Place some plumbers grease on the black O-ring located outside the 90 inlet fitting, still attached to the angle stop, for ease of installation of new valve.

Step 9

- Install new I-CON MOMENTUM® flush valve repeating the steps in reverse order.